

# Quick Setup

After unpacking your TV and its accessories, follow the steps here to get it set up and connected to your home theater system.

You'll also find quick instructions for using EPSON's Photo on Demand™ system for viewing, printing, and storing your digital photos in a flash.

Make sure you have these items:

- TV
  - Set-top shelf with screws
  - Remote control with 2 AA batteries
  - Package of paper (20 sheets)
- Ink cassette
  - CD-R/RW drive with USB cable and power cable
  - Documentation kit

Write down the TV's serial number on the line below. It is located on a sticker on the back left side of the TV.


Serial number \_\_\_\_\_

## Lifting the TV

When lifting the TV, have two people grasp it as shown below, using the two handles in back and the top of the frame in front.

### Warning

The TV is very heavy. Two people are required to lift or move the TV to avoid injury. Never move the TV and its stand together or the TV may fall and cause injury or be damaged.

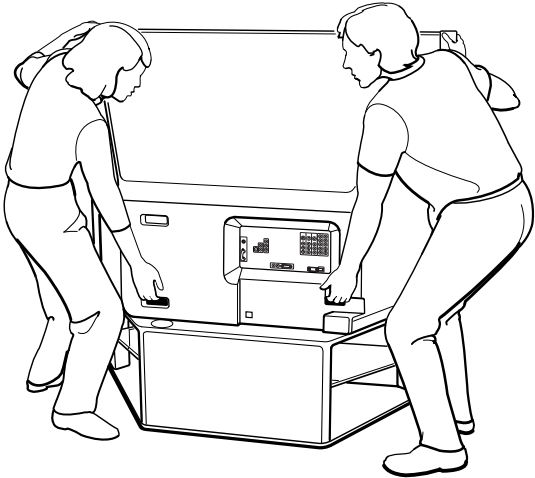



## Installing the Set-Top Shelf

The set-top shelf provides a convenient support for a center surround sound speaker or other component on top of the TV. The shelf can hold up to 11 lb (5 kg).

### Caution

Don't fold the shelf backwards on its hinge or it may break.

- 1 Fold the shelf into an upside-down L-shape with the shorter end on top.
- 2 Align the holes in the shelf with the holes on the back of the TV.

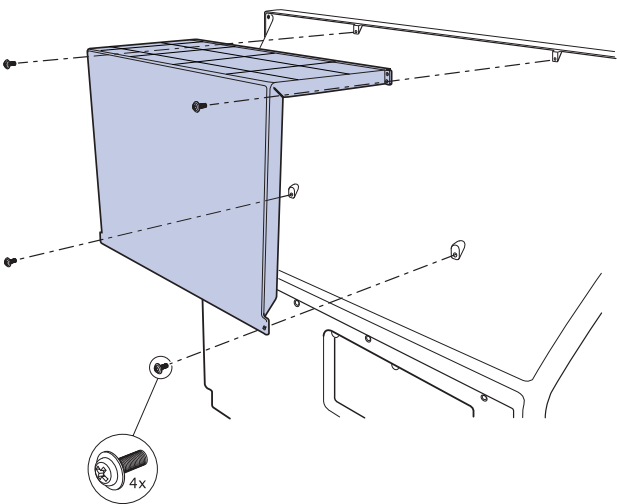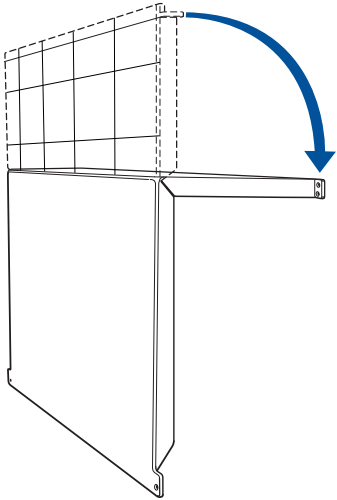

- 3 Using a Phillips-head screwdriver, secure the shelf to the TV with the four screws that came with it. Tighten the screws.


## Selecting a Location and TV Support

Select a suitable location for your TV and follow all of its safety instructions to ensure it operates safely and effectively, as described in the *User's Guide*.

You can use an optional EPSON TV stand to support your TV. Order part number LS47STD (for the LS47P1) or LS57STD (for the LS57P1) from your dealer.

If you use your own stand, make sure it can securely support the TV as follows:

Specification	LS47P1	LS57P1
Width of the base (minimum)	47 inches (119 cm)	56 inches (142 cm)
Depth of the base (minimum)	16 inches (41 cm)	18 inches (46 cm)
Weight capacity (minimum)	331 lb (150 kg)	331 lb (150 kg)

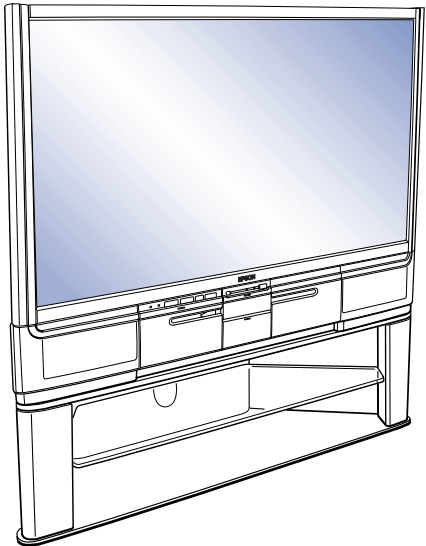

Place the stand in a location that allows you access to the back of the TV and provides at least 12 inches (30 cm) of room for ventilation at the sides.

You may want to secure the TV to a wall or other support so it stays upright on its stand during an earthquake or other situation. See your *User's Guide* for details.


# Connecting the TV

Here are instructions for connecting a digital TV (HDTV) receiver, DVD player, and external CD-R/RW drive to your TV. For instructions on connecting other equipment, see your *User's Guide*. Make sure your TV is unplugged before connecting equipment to it.

**Note**  
Before connecting a digital TV receiver to the TV, be sure to read any instructions that came with the receiver.


## Digital TV (HDTV) Receiver With a DVI-HDTV Connection

- 1 Turn off and unplug your digital TV receiver.
- 2 Connect a DVI-HDTV cable to the **DVI-HDTV Input** connector on the back of the TV and the DVI-HDTV OUT connector on your digital TV receiver.
- 3 Connect a standard, red/white audio cable to the **DVI-HDTV Input R and L Audio** connectors on the back of the TV and the R and L Audio Out connectors on your digital TV receiver.
- 4 Plug the digital TV receiver back into its power outlet.

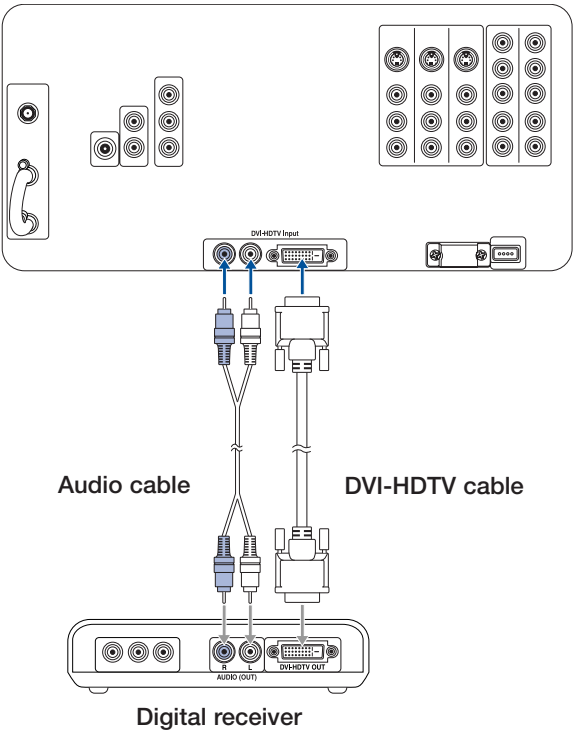


## Digital TV (HDTV) Receiver With Component Video Connection

- 1 Turn off and unplug your digital TV receiver.
- 2 Connect a component video cable to any available set of **Y** (green), **PB** (blue), and **PR** (red) connectors on the back of the TV and the Y, PB, and PR connectors on your digital TV receiver.
- 3 Connect a standard, red/white audio cable to the corresponding **Component Input R and L Audio** connectors on the back of the TV and the R and L Audio Out connectors on your digital TV receiver.
- 4 Plug your digital TV receiver back into its power outlet.

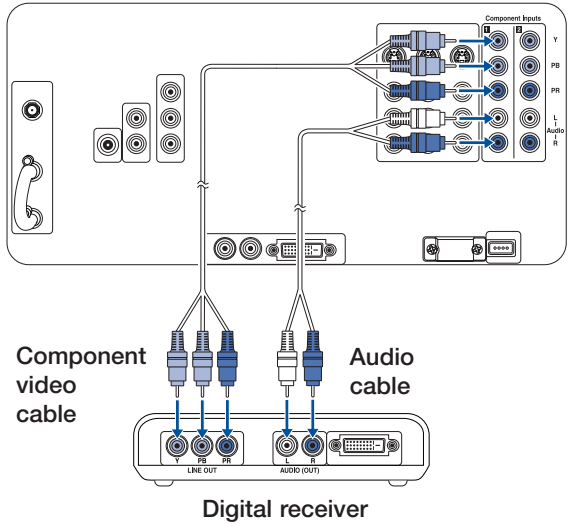


## DVD Player With Component Video Connection

- 1 Connect the component video cable to any available set of **Y** (green), **PB** (blue), and **PR** (red) connectors on the back of the TV and to the corresponding color Component Video Out connectors on your DVD player.
- 2 Connect a standard, red/white audio cable to the corresponding **Component Input R and L Audio** connectors on the back of the TV and the R and L Audio Line Out connectors on your DVD player.

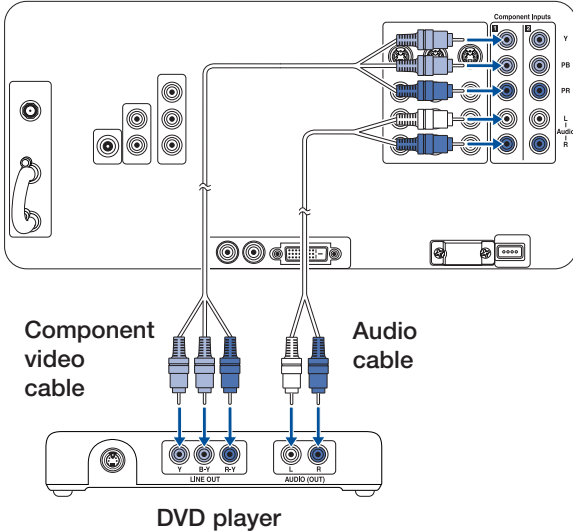


## DVD Player With an S-Video Connection

- 1 Connect an S-Video cable to one of the **S-Video** connectors on the back of the TV and the S-Video connector on your DVD player.
- 2 Connect a standard, red/white audio cable to the corresponding **Video Inputs R and L Audio** connectors on the back or front of the TV and the R and L Audio Line Out connectors on your DVD player.

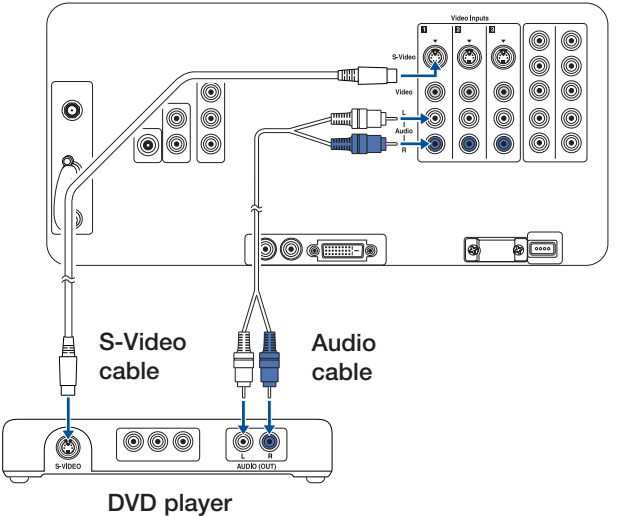


## External CD-R/RW Drive Connection

- 1 Connect the USB cable to the USB port on your external CD-R/RW drive and the **EXT. I/F** connector on the back of the TV.
- 2 Connect the CD-R/RW power cable to the drive and plug it into an electrical outlet.

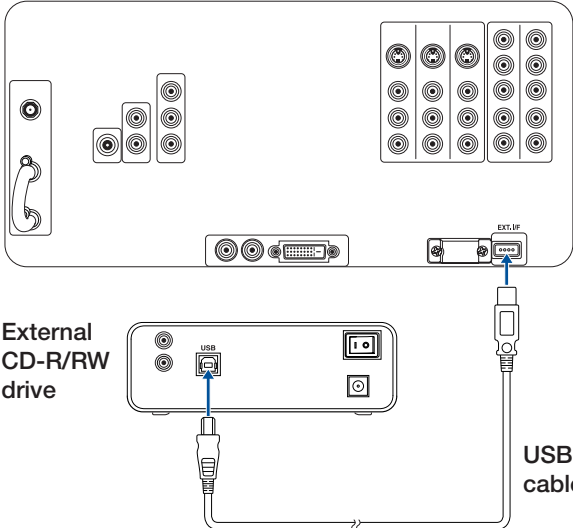


# Inserting the Remote Control Batteries

- 1 Press in on the top of the battery cover on the back of the remote control. Then slide the cover down and off the remote.
- 2 Insert the batteries as shown here, making sure the + and – ends face the right way. Then push them down flat.
- 3 Place the cover into the grooves and slide the cover all the way up until it clicks into place.

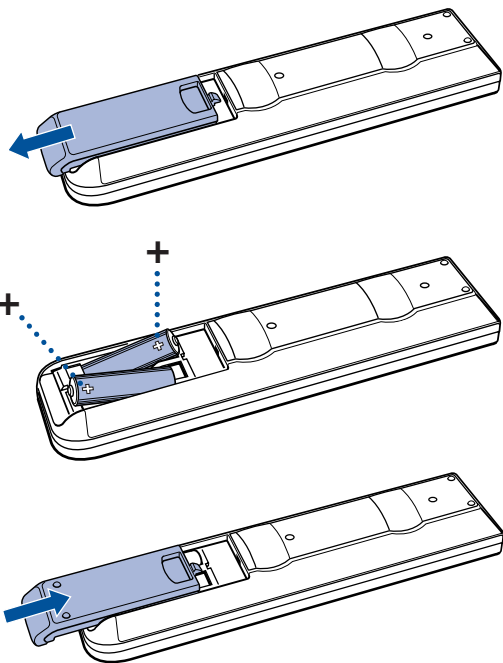


# Installing the Printer Ink Cassette


- 1 Press and release the printer cover latch to open the cover.
- 2 Flip down the printer lock cover and turn the lock counterclockwise to loosen it. It spins freely when it is unlocked.

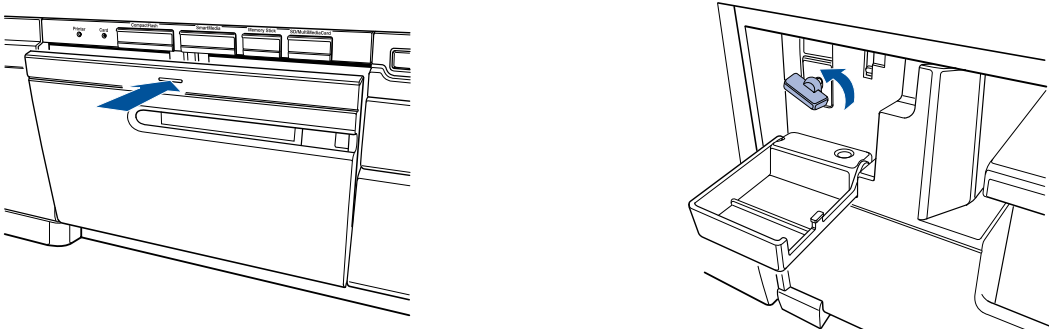

- 3 Grasp the printer handle and pull the printer out as far as it goes.
- 4 Pull open the ink cover on the side of the printer.

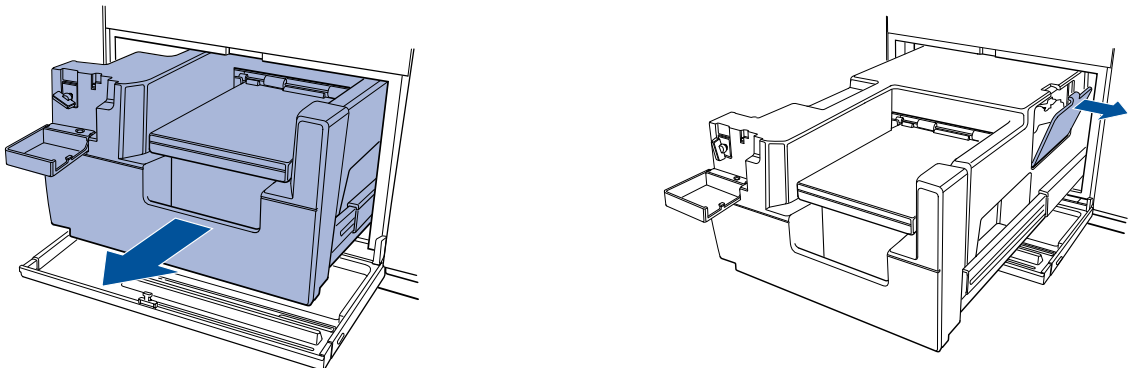

- 5 Remove the cassette from its package. Then remove the red paper strip from the end.
- 6 If the ink ribbon is slack, rotate the spindles to tighten it.
- 7 Position the cassette as shown below, on the right.


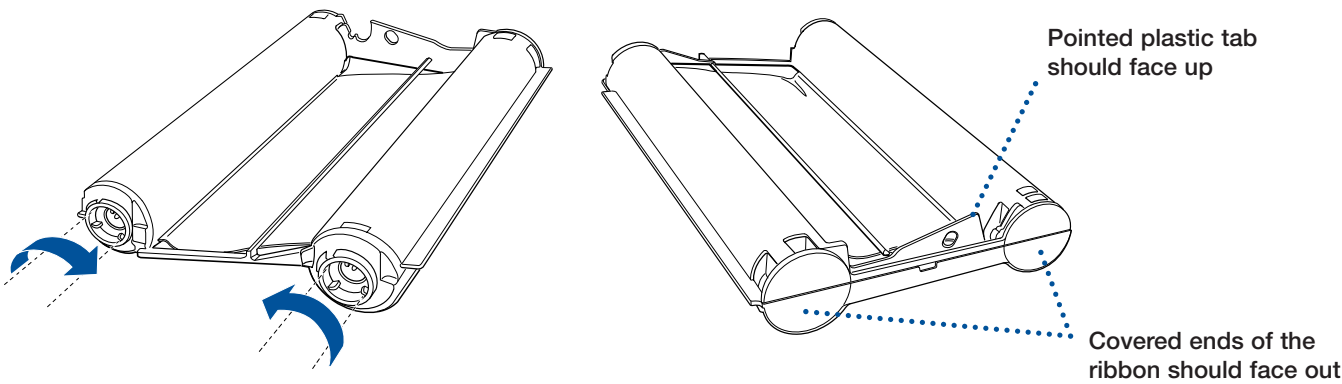


- 8 Carefully align the cassette and its ribbon with the slot, then gently push in the cassette until it clicks into place beneath the latch.

### Caution

You must align the cassette and its ribbon with the slot or you will damage it when you slide it in.

- 9 Flip up the ink cover and push it closed.
- 10 Slide in the printer until it stops.
- 11 Push in on the printer lock as you turn it clockwise to tighten it. If it doesn't tighten, push the printer in further and try again.
- 12 Flip up the lock cover.

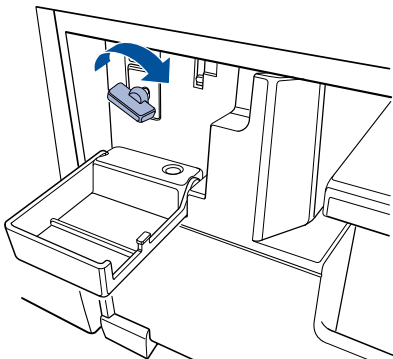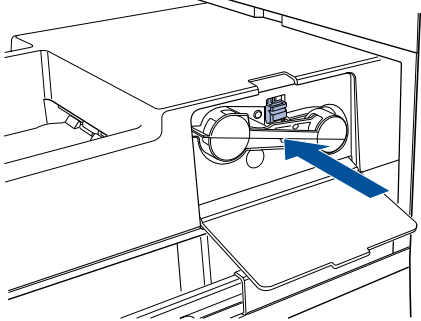


### Caution

Make sure to lock the printer securely and close the lock cover completely or the printer won't print.


# Loading Paper

- 1
- Open the paper cassette lid.
- 2
- You can load up to 20 sheets of paper. Position the paper with the shiny side face up, with the wide bordered edge facing the hinge of the cassette, and the narrow bordered end facing the open end of the cassette.

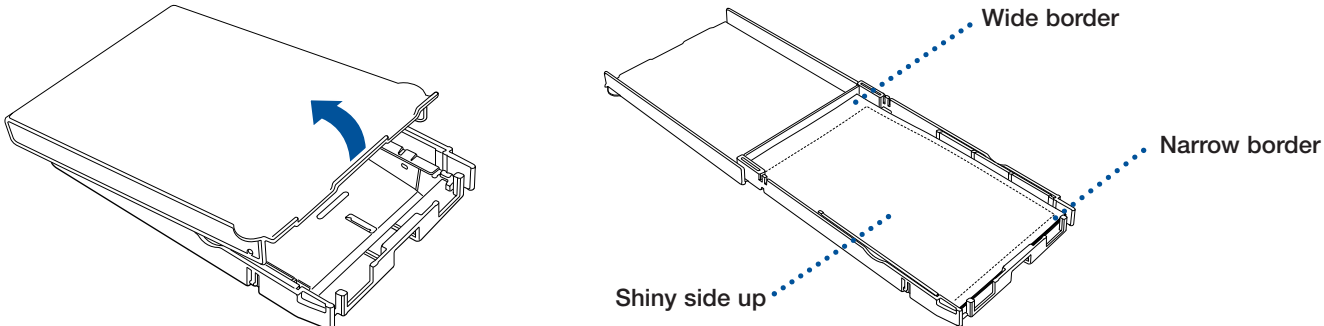

**Caution**  
Don't remove the perforated borders on the paper before you print.  
The paper may jam or the printer may malfunction when it loads the paper.  
Don't touch the shiny side of the paper or it will become discolored.


- 3
- Close the cassette lid and press it until it clicks shut.
- 4
- Slide the cassette into its slot, open end first.  
Push it in until it clicks into place.
- 5
- Close the printer cover.

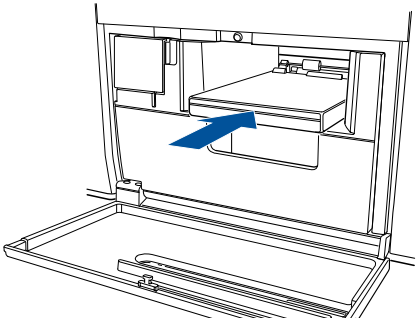

# Plugging In and Turning On the TV

Turn on your connected equipment and insert a tape or disc, if necessary, to check the TV's operation with the equipment.

- 1
- Plug the TV's power cord into a wall outlet or power strip. The **Power** light comes on orange.
- 2
- Press the **Power** button on the TV panel or the remote control.
- The **Power** light flashes green while the TV warms up. After a few moments, the **Power** light stops flashing and shines green.

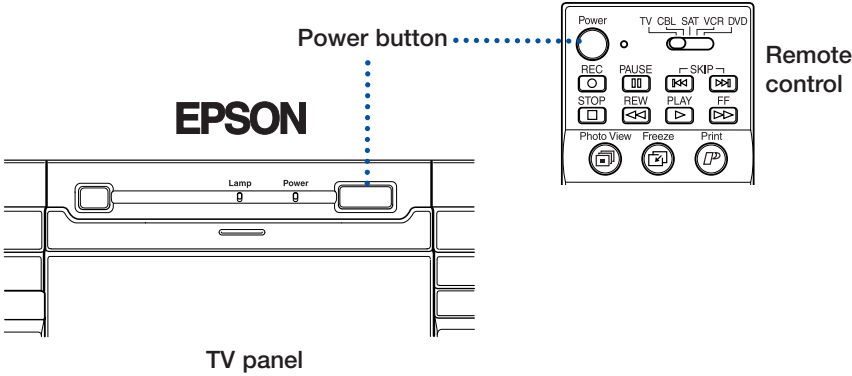

- 3
- Press the **TV/Video** button on the remote control or the TV panel to select the source you want to look at (TV, DVD, etc.).

**Note**  
You can press the **TV/Video** button 10 seconds after pressing the **Power** button.  
You don't have to wait for the **Power** light to stop flashing first.

- If you see a blank screen with **No Signal** at the bottom:
- Turn on the source (VCR, DVD, etc.)
  - Insert a disc or tape, if you're viewing one, and press **Play**
  - Press the **TV/Video** button to select the source
  - Check the cable connections
  - If it's still not working, see your *User's Guide*.




To turn off the TV, press the **Power** button. The **Power** light flashes orange as the TV cools down.  
When the TV is cool, the **Power** light stops flashing and shines orange. Leave the TV like this or unplug it.

# Setting the Volume

To turn the TV speaker volume up or down, use the **Vol.** up and down button on the TV panel or remote control.

To mute the sound, press the **Mute** button on the remote control.

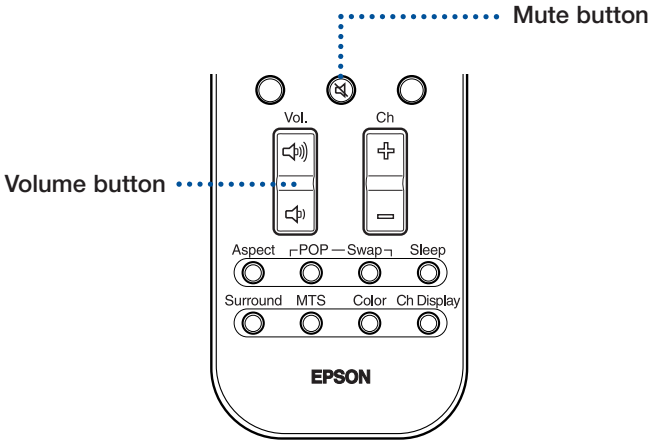




# Using Photo on Demand


Your TV’s Photo on Demand system lets you view photos on digital photo cards (also called memory cards) or CD-R/RW discs, print the photos on its built-in printer, and store them on CDs. Follow the quick steps below or the expanded instructions in your *User’s Guide*.

## Inserting a Photo Card


- 1 Make sure the TV is turned on and the **Power** light is green and not flashing.
- 2 Insert your photo card in the appropriate slot on the TV’s front panel. The **Card** light turns on.

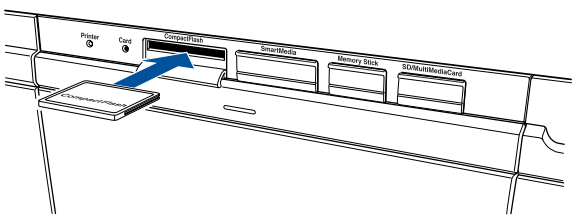


CompactFlash® card

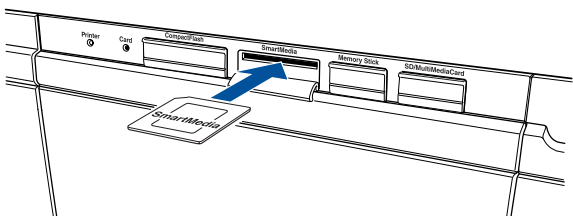

SmartMedia® card

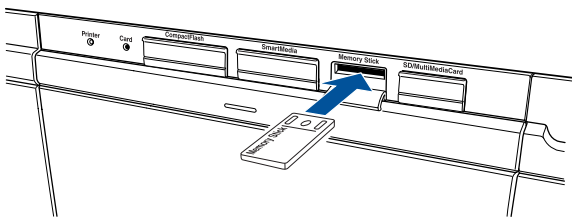

Memory Stick®

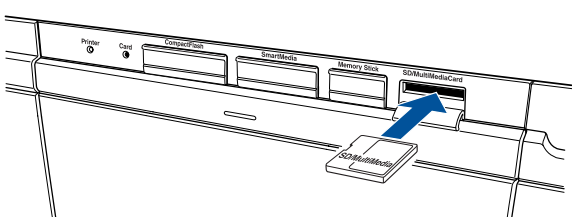


SD/MultiMediaCard™

- 3 After a few seconds, the Photo screen appears. It displays the photos on your card and outlines the first one in gold: .....

### Note

If the Photo viewer doesn’t come up automatically, press the **Photo View** button on the TV panel or remote control.

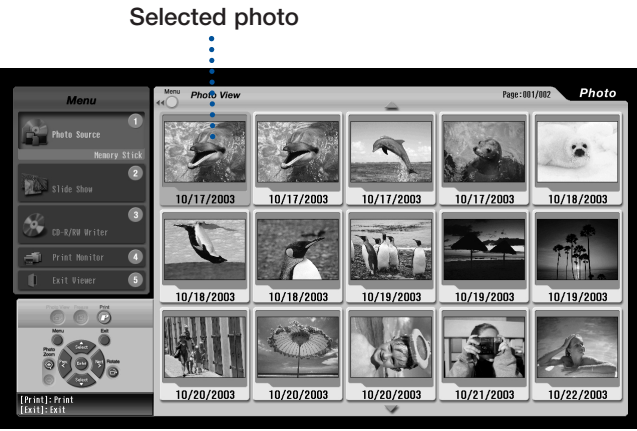

- To select a different photo, press the **Prev. <**, **Next >**, **Select ▼**, or **Select ▲** button.
- To enlarge a photo view, press the **Enter** button on the TV panel or remote control.
- To zoom into the photo further, press the **Photo Zoom +** button until the image is up to 3 or 4 times larger. Press **Photo Zoom -** to zoom out.
- To rotate a photo, press the **Rotate** button on the remote control (when the photo isn’t zoomed). Press it again to keep rotating.

## Viewing a Slide Show


You can view your photos automatically, for a few seconds each, by running a slide show. You can view all the photos or just selected ones.

- 1 Press the **2** button on the remote control. The **Slide Show** menu on the left of the screen opens: .....

- 2 To view all your photos in a slide show, press **Enter** to select **View Slide Show**.

The first photo is enlarged and appears on the screen. It displays for 3 seconds, then the next photo is displayed.

- 3 To end the slide show, press **Exit**.

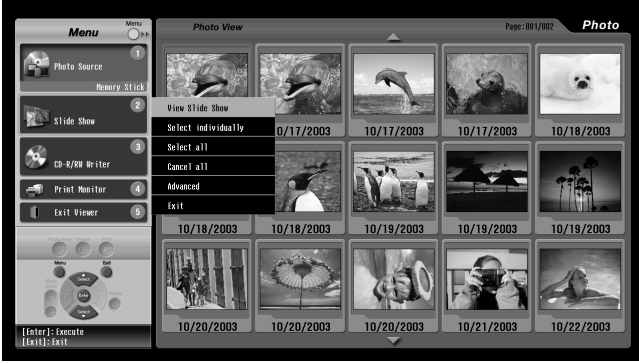

## Selecting a Photo and Printing It

You can print one photo at a time from a digital photo card (memory card) or CD-R/RW.

- 1 Press **Prev. <**, **Next >**, **Select ▼**, or **Select ▲** to highlight the photo you want to print.

- 2 Press the **Print** button on the TV panel or remote control. You see the Print Settings screen: .....

- 3 To print one copy of the photo, press **Enter**.

To print multiple copies, press **Next >** until the number in the Copies box is correct. Then press **Enter**. After a moment, printing starts.

During printing, the **Printer** light flashes. When printing is finished, the **Printer** light turns off.



- 4 To print additional photos, repeat these steps. You can send multiple photos for printing at one time, up to 15 photos.

If you see a printing error message, select **Yes** to check for the problem. Then follow the on-screen instructions to solve the problem and continue printing. For additional help, see your *User’s Guide*.


When you’re finished printing, remove the borders from the edges of your photo by bending them back and forth and tearing them off.

Storing Photos on a CD

Before you save photos on a CD, make sure you’ve connected the external CD-R/RW drive that came with your TV, plugged it in, and turned it on.

**Note**  
Make sure that your disc can be written to at 4X speed. Some high-speed discs don’t support 4X writiing, so check your disc specifications before inserting it into the drive. See your *User’s Guide* for additional details on supported discs and formats.

- 1 Press the eject button on the drive to open the tray.
- 2 Place a new, blank CD-R/RW disc on the tray with the label side facing up. Make sure the disc lays flat in the tray.
- 3 Press the eject button again to close the tray.

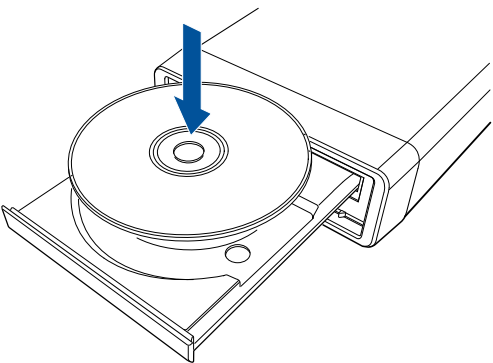

**Caution**  
Always use the eject button to open and close the tray. Pushing in the tray may damage the drive and your disc.

- 4 Press the **3** button on the remote control to open the **CD-R/RW Writer** menu. ....



- 5 To write all of the photos on your digital photo card to the CD, press **Enter** to select **Write to CD-R/RW**.
- 6 You see a confirmation message. Press **Enter** to select **Yes** or press **Exit** to cancel.

- 7 You see a writing confirmation message while your photos are written to the CD and the drive light flashes.

When it’s finished, the CD tray opens and you see a completion message. Press **Enter**.

Solving Problems

If you have problems setting up your TV, see the suggestions here. For additional troubleshooting advice, see your *User’s Guide*.

Problem	Solution
The power won’t come on.	<p>Make sure your electrical outlet is working and isn’t controlled by a switch or timer.</p> <p>Check that the power cord is connected securely.</p> <p>If the <b>Power</b> light is flashing orange, the TV is cooling down. When it stops flashing and lights orange, you can unplug it or press the <b>Power</b> button to turn it on.</p> <p>If the <b>Power</b> light is flashing green, the TV is warming up. When it stops flashing and lights green, the TV is ready.</p> <p>If the <b>Power</b> light is red, you may have a problem with the TV, depending on the state of the <b>Lamp</b> light. See your <i>User’s Guide</i> for details.</p>
The buttons on the TV panel don’t work.	<p>When the TV is warming up or cooling down (the <b>Power</b> light is flashing), you can’t use the buttons. When the <b>Power</b> light stays lit green or orange, the buttons are operable.</p>
The TV’s fan keeps running when the TV is turned off.	<p>The TV cools itself down using internal power even after you turn it off.</p>

Where to Get Help

EPSON provides technical assistance through the World Wide Web 24 hours a day. From the Internet, you can reach EPSON’s product support page at <http://support.epson.com>. After selecting your product, you can access troubleshooting information, download product documentation, and receive technical advice through e-mail.

To use the EPSON PrivateLine<sup>SM</sup> Support service, call (800) 637-7661 and enter the PIN on the EPSON PrivateLine Support card included with your documentation. This is the fastest way of speaking to a live representative, and it’s free. This service is available 6 AM to 6 PM, Pacific Time, Monday through Friday, for the duration of your warranty period.

You may also speak with a TV support specialist by dialing one of these numbers:

- U.S.: (562) 276-4394, 6 AM to 6 PM, Pacific Time, Monday through Friday
- Canada: (905) 709-3839, 6 AM to 6 PM, Pacific Time, Monday through Friday

Toll or long distance charges may apply.

Before you call, please have the following information ready:

- Product name (EPSON Livingstation LS47P1 or LS57P1)
- Product serial number (located on the back left side of the TV or on the front of this sheet)
- Description of the problem

You can purchase supplies and accessories from your dealer or from EPSON. Call (800) 873-7766 or visit the EPSON Store at [www.epsonstore.com](http://www.epsonstore.com) (U.S. sales only). In Canada, please call (800) 463-7766 for dealer referral.

EPSON is a registered trademark and Livingstation is a trademark of SEIKO EPSON CORPORATION. PrivateLine is a service mark and Photo on Demand is a trademark of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.